

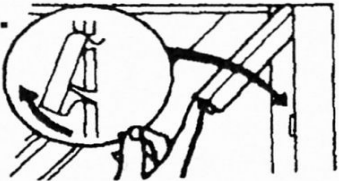
# 60, 61, or 64 Series Channel Balance Generic Instructions

Below are generic instructions that may help you replace the 60, 61, or 64 series of channel balances. They may not match your window exactly.

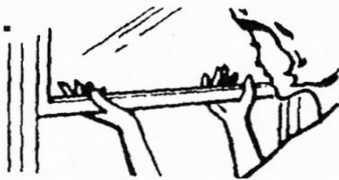
## Safety Guidelines

- Use help when working with a large window sash to avoid injury.
- Use caution! Maintain strong grip on balance when removing or installing. Balances are spring-loaded and they will tend to "shoot" upward possibly causing personal injury and/or product damage. Beware of oil causing slippery metal surface.

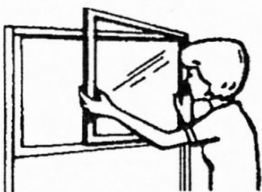
## Suggested Instructions for Removing or Installing Sash Balances

**1.** 

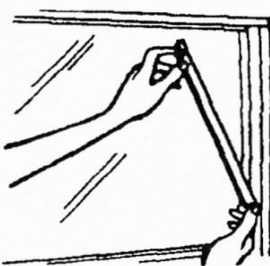
Remove sash stop from top of frame jamb, which will expose formed tabs or take out clips, which may be pivoted forward, as shown in circle.

**2.** 

Raise sash to its uppermost position. Sash will dis-engage from balance, which will be retained by the formed tab or clip in frame jamb.

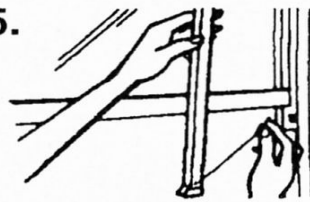
**3.** 

Push sash into either frame jamb & rotate opposite side towards interior, allowing for removal of operating sash.

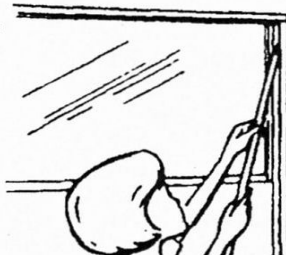
**4.** 

Push top of sash balance downward to dis-engage from tab or take-out clip. Then lift balance towards center of window & remove cord terminal clip from square hole located in center of frame jamb.

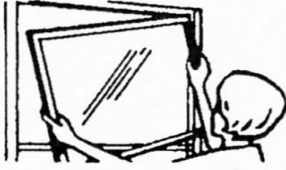
**REPLACEMENT OF SASH BALANCE IN WINDOW:**  
Reverse the aforementioned procedure as follows:

**5.** 

Insert cord terminal clip in square hole, located in center of frame jamb.

**6.** 

With terminal clip installed, insert balance into frame jamb and locate top plastic guide under formed tab at top of frame jamb.

**7.** 

With sash located above the balance, insert sash into either frame jamb, rotating opposite side of sash into opposite frame jamb. Center sash between jambs and lower sash to engage sash balance. Replace sash stops at top of frame jambs.